WCS-222

USER MANUAL
HANDBUCH
HANDLEIDING
MANUEL DESCRIPTIF
РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ
КЕРІВНИЦТВО КОРИСТУВАЧА

GEMBIRD®

MULTIMEDIA SPEAKER 2.1 SYSTEM
MULTIMEDIA SOUND SYSTEM 2.1
MULTIMEDIA 2.1 SPEAKERSET
MULTIMÉDIA SOUND SYSTEM 2.1
МУЛЬТИМЕДИЙНАЯ 2.1 КАНАЛЬНАЯ АУДИО-СИСТЕМА
МУЛЬТИМЕДІЙНА 2.1 КАНАЛЬНА АУДІО-СИСТЕМА

FEATURES

- Extra high quality sound with no noise and distortion
- Wooden cabinets
- Animated graphic equalizer display
- Full-function remote control

SPECIFICATIONS

- Vacuum fluorescent display (VFD)
- Total RMS power: 60 Watts
- Subwoofer: 30 Watts RMS, 4 Ohms at 100 Hz at 10 % THD (total harmonic distortion)
- Satellites: 30 Watts RMS (2x15 W), 4 Ohms at 1 KHz at 10 % THD (total harmonic distortion)
- Total peak power: 120 W at < 10 % THD
- System THD: Better than 0.05 % THD
- Signal to noise ratio: > 85 dB
- Frequency response: 20 Hz-20 KHz
- Driver size: 3”+1” high excursion satellites, 4” high excursion subwoofer
- Satellites: 92 (W) x 135 (D) x 250 (H) mm
- MDF wooden enclosures for the subwoofer and satellite speakers
- Subwoofer: 145 (W) x 300 (D) x 310 (H) mm
- Power supply: 220 – 240 VAC 50/60 Hz

All brands and logos are registered trademarks of their respective owners

IMPORTANT SAFETY INFORMATION

CAUTION ELECTRIC SHOCK HAZARD

* Read these instructions.
* Keep these instructions.
* Heed all warnings.
* Follow all instructions.
* Unplug the speakers from the computer and from the electrical outlet before cleaning them with a dry cloth.
* Install in accordance with the manufacturer's instructions.
* Place the speakers in a stable location so they will not fall causing damage to the speakers or bodily harm
* Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
* Do not block the openings in the speaker cabinets, never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
* Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

All brands and logos are registered trademarks of their respective owners

* Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provide plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

* Operate the speakers only from the low level audio line out jack of the computer or of an audio device.

* Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

* Only use attachments/accessories specified by the manufacturer.

* For added protection during lighting storms, unplug the speakers from the electrical outlet and turn off the computer.

* Unplug this apparatus when unused for long periods of time.

* Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug has been damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

* Refer all servicing to qualified service personnel.

*The speakers should be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the speakers from the AC mains receptacle.

* Do not place any form of open flame source, such as lighted candles, on the apparatus.

* The socket-outlet shall be installed near the equipment and shall be readily accessible.

All brands and logos are registered trademarks of their respective owners

WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK,DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Setting the WCS-222 speaker system:

Important: For your safety, set up the system before plugging it into a power source.

1. Before attaching the cables to the subwoofer, position the two front satellite speakers on either side of your monitor. Depending on where you place your speakers, adjust them to direct the sound toward you. For best sound quality, place the subwoofer on the floor beneath your desk. Be sure to maintain at least 6 inches of spacing around the subwoofer to allow for adequate ventilation.

2.Connect the satellite speakers to the subwoofer as shown on the previous page.

3. **A)**.If you have a PC:

Plug the green audio input cable from the right speaker into the speaker output on your PC.

B).If you have a video game console (PlayStation (R), PlayStation(R) 2, Xbox(TM), or GameCube(R)):

Requires the Console Gaming Y-adapter(sold separately). Connect the red and white RCA cable that came with you console gaming system to the matching red and white RCA jacks on the Console.

All brands and logos are registered trademarks of their respective owners

Function

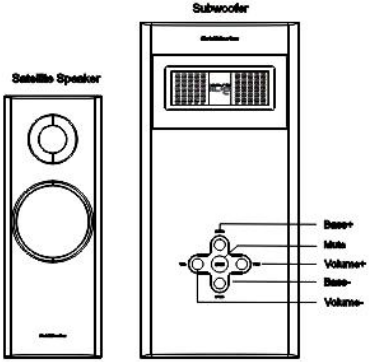

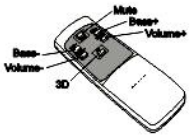

Remote control

Connection to satellites

All brands and logos are registered trademarks of their respective owners

Gaming Y-adapter.

Connect the 3.5 mm Stereo Cable connected with Subwoofer to the lime green input on the Console Gaming Y-adapter.

C). If you have a DVD/VCD player:

Requires a dual-RCA cable(normally provided with DVD/VCD player).Connect the red and white RCA Cable to the output Jacks on the players.

Connect another end of Dual-RCA cable to the Audio input Jack on Subwoofer.

4.Plug the subwoofer's power cord into an electrical outlet.

All brands and logos are registered trademarks of their respective owners

Accessing controls :

Power On/off:

Located on the subwoofer, use to turn on/off the power with VFD display.

System Volume

Located on the subwoofer and remote controller, Use to adjusts the overall system volume.

Subwoofer Volume

Located on the subwoofer and remote controller, Use to adjust subwoofer volume(bass level).

XBASS

Located on the remote controller, Use to get xbass sound effort.

Mute:

Located on the subwoofer and remote controller, use to minimize the sound.

All brands and logos are registered trademarks of their respective owners

EC Declaration of Conformity

We hereby certify that the following product complies with all the relevant
Safety Requirements of § 4 EMVG and of the Directives 2006/95/EC; 93/68/EEC and 2004/108/EC.

Applicant :	**Gembird Europe BV** **Wittevrouwen 56,** **1358CD, Almere, The Netherlands**
Equipment :	**Computer parts**
Model Nos. :	**WCS-222**
Product description :	**WCS-222 Multimedia Speaker 2.1 system**

European standards:

EN55022:2006; EN55024:1998+A1:2001+A2:2003; EN61000-3-2:2000+ A2:2005; EN61000-3-3:1995+A1:2001+A2:2005;

The following manufacturer/WITHIN Europe is responsible for this declaration:

Gembird Europe BV
Wittevrouwen 56, 1358CD, Almere, The Netherlands
Tel: +31-(0)36-5211588. Fax: +31-(0)36-5347835

Director

The Netherlands / Oct. 13, 2008
Place and Date

Authorized signature

All brands and logos are registered trademarks of their respective owners

Waste disposal:

Do not deposit this equipment with the household waste. Improper disposal can harm both the environment and human health. For Information about waste collection facilities for used electrical and electronic devices, please contact your city council or an authorized company for the disposal of electrical and electronic equipment.

Entsorgungshinweise:

Werfen Sie dieses Gerät nicht in den Hausmüll. Unsachgemäße Entsorgung kann sowohl der Umwelt als auch der menschlichen Gesundheit schaden. Informationen zu Sammelstellen für Altgeräte erhalten Sie bei Ihrer Stadtverwaltung oder einer autorisierten Stelle für die Entsorgung von Elektro-und Elektronikgeräten.

Richtlijnen m.b.t. afvalverwerking

Batterijen en accu's dienen als kleinchemisch afval afgeleverd te worden bij toegewezen afvalverzamelpunten (zie www.afvalgids.nl). U dient ervoor te zorgen dat de batterijen/accu's leeg zijn en dus geen stroom meer kunnen leveren. Let op, de batterijen/accu's dienen onbeschadigd ingeleverd te worden.

Gooi dit product niet weg in uw vuilnisbak. Dit kan zowel het milieu als de menselijke gezondheid schade toebrengen. Informatie over het inleveren van dit product kunt u inwinnen bij uw gemeentelijke vuilnisdienst of andere geautoriseerde instelling in uw buurt.

Traitement des déchets:

Ne jetez pas cet appareil dans les déchets domestiques. Un traitement inapproprié peut être dommageable à l'environnement et à la santé humain.

Vous trouvez des informations sur les centres de rassemblement des appareils vieux chez l'administration municipale ou

chez un centre autorisé pour le traitement des appareils électriques ou électroniques.

All brands and logos are registered trademarks of their respective owners

WARRANTY CONDITIONS	GARANTIE BEDINGUNGEN
The warranty period is 36 months and begins with the sale to the end user. The receipt must clearly list the date of purchase and the part number, in addition it should be printed. Keep the receipt for the entire warranty period since it is required for all warranty claims. During the warranty period the defective items will be credited, repaired or replaced at the manufacturer's expense. Work carried out under the warranty neither extends the warranty period nor starts a new warranty period. The manufacturer reserves the right to void any warranty claim for damages or defects due to misuse, abuse or external impact (falling down, impact, ingress of water, dust, contamination or break). Wearing parts (e.g. rechargeable batteries) are excluded from the warranty. Upon receipt of the RMA goods, Gembird Europe B.V. reserves the right to choose between replacement of defective goods or issuing a credit note. The credit note amount will always be calculated on the basis of the current market value of the defective products	Die Garantie beträgt 36 Monate ab Verkaufsdatum an den Endverbraucher. Das Kaufdatum und der Gerätetyp sind durch eine maschinell erstellte Kaufquittung zu belegen. Bitte bewahren Sie Ihren Kaufbeleg daher für die Dauer der Garantie auf, da er Voraussetzung für eine eventuelle Reklamation ist. Innerhalb der Garantiezeit werden alle Mängel, wahlweise durch den Hersteller entweder durch Instandsetzung, Austausch mangelhafter Teile oder im Austausch, behoben. Die Ausführung der Garantieleistung bewirkt weder eine Verlängerung noch einen Neubeginn der Garantiezeit. Eine Garantieleistung entfällt für Schäden oder Mängel die durch unsachgemäße Handhabung oder durch äußere Einwirkung (Sturz, Schlag, Wasser, Staub, Verschmutzung oder Bruch) herbeigeführt wurden. Verschleißteile (z.B. Akkus) sind von der Garantie ausgenommen.
Gembird Europe B.V. Wittevrouwen 56, 1358CD Almere The Netherlands www.gembird.nl/support support@gmb.nl Tel. +31-36-5211588 (0900-4362473 inside The Netherlands, € 0,15 p/m, mobile costs not included)	GEMBIRD Deutschland GmbH Coesterweg 45, 59494 Soest Deutschland www.gembird.de/support support@gembird.de Tel. +49-180 5-436247 0,14 € pro Minute aus dem deutschen Festnetz. Mobilfunkpreise können abweichen

All brands and logos are registered trademarks of their respective owners

GARANTIE VOORWAARDEN	CONDITIONS DE GARANTIE
De garantietermijn bedraagt 36 maanden en gaat in op de aankoopdatum van het product door de eindgebruiker. Op de aankoopbon moeten de aankoopdatum en productomschrijving duidelijk vermeld staan. Gelieve de aankoopbon de gehele garantieperiode te bewaren, deze is ten alle tijden benodigd voor alle garantie aanspraken. Tijdens de garantieperiode zullen alle gebreken verholpen of vervangen worden door de fabrikant d.m.v. reparatie, omruiling van het defecte onderdeel of het gehele apparaat. Aanspraken tijdens de garantieperiode leiden niet tot verlenging hiervan. Garantieaanspraak vervalt bij schade of gebreken die ontstaan zijn door oneigenlijk gebruik, misbruik of invloeden van buitenaf (vallen, stoten, water, stof, vuil of breken). Slijtagegevoelige onderdelen (b.v. batterijen) zijn uitgesloten van garantie. Bij ontvangst van de RMA goederen behoudt Gembird zich het recht om te kiezen tussen vervanging van de defecte waren of het uitgeven van een kreditnota. Het bedrag van de kreditnota zal altijd gecalculeerd zijn op basis van de huidige marktprijs voor het defecte produkt.	Garantie est de 36 mois a partir de la date d'achat de l'utilisateur final. Le talon de garantie doit énumérer clairement la date d'achat et le type d'appareil. Conservez le reçu d'achat pendant toute la durée de la garantie car elle est nécessaire pour toute réclamation. Au cours de la période de garantie tous les défauts doivent être remplacé aux frais du fabricant, soit par la réparation ou la remplacement de la pièce défectueuse ou l'ensemble du produit. Les travaux effectués sous garantie ne prolongent pas la période de garantie ni ne commencent pas une nouvelle période de garantie. Le fabricant se réserve le droit d'annuler toute demande de garantie pour les dommages ou défauts dus à une mauvaise utilisation, abus ou les effets externes (chute, choc, pénétration de l'eau, la poussière, etc..). Les pièces d'usure (par exemple les piles rechargeables) sont exclus de la garantie. Dès réception de la marchandise sous garantie, le SAV de Gembird Europe BV se réserve le droit de choisir entre le remplacement des produits défectueux ou de délivrer un avoir. Le montant d'avoir sera toujours calculée sur la base de la valeur actuelle du marché des produits défectueux.
Gembird Europe B.V. Wittevrouwen 56, 1358CD Almere The Netherlands www.gembird.nl/support support@gmb.nl Tel. 0900-4362473 € 0,15 p/m binnen Nederland Exclusief mobiele telefoonkosten	Gembird Europe B.V. Wittevrouwen 56 1358CD Almere, The Netherlands www.gembird.nl/support support@gmb.nl +33(0) 251 404849 Prix d'appel depuis telephone fixe Pays-Bas : 0.15 euro / min Prix d'appel depuis telephone mobile / autre pays - selon operateur

All brands and logos are registered trademarks of their respective owners

ГАРАНТИЙНЫЙ ТАЛОН

1. Гарантийное обслуживание предоставляется в течение срока гарантии, при наличии правильно и четко заполненного гарантийного талона, и изделия в полной комплектации. Серийный номер и модель изделия должны соответствовать указанным в гарантийном талоне.
2. Гарантийное обслуживание представляет собой бесплатное устранение всех неполадок (ремонт), или замену изделия на новое (аналогичное).
3. Гарантия не распространяется на неисправности, вызванные следующими причинами:
• использование изделия не по назначению.
• нарушение условий эксплуатации, хранения или перевозки изделия, которые указаны в настоящей инструкции.
• подключение нестандартных или неисправных периферийных устройств, аксессуаров.
• механические повреждения, попадание внутрь изделия посторонних предметов, веществ, жидкостей, насекомых.
• ремонт изделия не уполномоченными на то лицами.
4. Комплектность и внешний вид изделия проверяются Покупателем при получении товара в присутствии персонала фирмы.
Послепродажные претензии по укомплектованности и внешнему виду не принимаются.

Наименование изделия: _____

Модель _____

Серийный номер _____

Срок гарантии _____

Дата продажи «____» _____ 20____ года

Фирма-продавец: _____
Адрес и телефон фирмы-продавца:
_____
М.П. С условиями гарантии ознакомлен и согласен:

Продавец: _____ Покупатель: _____

УМОВИ ГАРАНТІЙНОГО ОБСЛУГОВУВАННЯ

1. Гарантійне обслуговування надається протягом терміну гарантії, при наявності Гарантійного талону, заповненого належним чином, та виробу в повній комплектації.
2. Гарантійне обслуговування не підтримується в разі порушення правил експлуатації, зберігання або перевезення виробу, що зазначені в інструкції по експлуатації виробу.
3. Гарантійне обслуговування скасовується у випадках:
- наявності механічних пошкоджень або слідів стороннього втручання;
- пошкодження викликані стихійним лихом або нещасним випадком, включаючи й блискавку, потраплянням у виріб сторонніх предметів, рідин, комах, тощо;
- пошкодження викликані застосуванням або підключенням нестандартних або несправних периферійних пристроїв, аксесуарів;
4. Гарантія не поширюється на витратні матеріали та додаткові аксесуари;
З гарантійними умовами згоден.

Підпис покупця: _____

ГАРАНТІЙНИЙ ТАЛОН № _____

Товар/модель _____

Серійний номер _____

Термін гарантії _____

Дата продажу _____

Продавець (назва, телефон)

_____

Печатка та підпис продавця

_____

З гарантійних питань звертайтесь до сервісних центрів Gembird. Про адреси та контакти Ви можете дізнатись на сайті www.gembird.ua або по телефону 044-4510213.

GEMBIRD EUROPE B.V. http://www.gembird.eu
All brands and logos are registered trademarks of their respective owners